

# **CAR-A-TOW**

## **Folding Towing Frames**

Manufacturer of CAR-A-TOW Towing Frames

### GENERAL MAINTENANCE

Apply “Wipe” of grease to tow ball and pull-bar ends as required.

Apply “Wipe” of grease to inside of rubber pull-bar end caps as required.

Pump grease into nipples on coupling (2 on top of coupling and 1 on brake operating lever) as required, at least once a year, perhaps at the beginning of the season.

Wipe off excess grease after pumping with grease gun.

We advise you DO NOT lubricate the brake cable fitted to the car. Oil will only attract dust and grit. Release the cable from the brake pedal, pull it through from each end and clean with a dry cloth.